

# RMSD

Complete Rework System with DT530

Ref.: **RMSD-9QA** 100V  
**RMSD-1QA** 120V  
**RMSD-2QA** 230V

### SPARE PARTS

#### DDE CONTROL UNIT:

|                 |         |
|-----------------|---------|
| -REAR CIRCUIT   | 0028012 |
| -ENCLOSURE      |         |
| · TOP           | 0019028 |
| · BOTTOM        | 0014567 |
| · FRONT+DISPLAY | 0031187 |
| · BACK          | 0021064 |

#### MSE-B:

|              |         |
|--------------|---------|
| - CIRCUIT    | 0033215 |
| - ENCLOSURE  |         |
| · TOP        | 0032092 |
| · BOTTOM     | 0032089 |
| · FRONT      | 0032096 |
| · BACK       | 0032091 |
| - PUMP       | 0031985 |
| - AC ADAPTER | 0028084 |

Ref.: **DDE-9C** 100V FUSE T-5A  
**DDE-1C** 120V FUSE T-4A  
**DDE-2C** 230V FUSE T-2A

### SPARE PARTS

#### JTSE CONTROL UNIT:

|              |         |
|--------------|---------|
| -ENCLOSURES: |         |
| · TOP        | 0019028 |
| · BOTTOM     | 0013486 |
| · FRONT      | 0026199 |
| · BACK       | 0021065 |

#### FOR REF. JTSE-9UA/JTSE-1UA:

|               |         |
|---------------|---------|
| -CIRCUIT      | 0024361 |
| -SUCTION PUMP | 0026338 |
| -HOT AIR PUMP | 0018769 |

#### FOR REF. JTSE-2UA:

|               |         |
|---------------|---------|
| -CIRCUIT      | 0024360 |
| -SUCTION PUMP | 0026337 |
| -HOT AIR PUMP | 0018769 |

Ref.: **JTSE-9A** 100V FUSE T-8A  
**JTSE-1A** 120V FUSE T-8A  
**JTSE-2A** 230V FUSE T-4A

